



Note:

1. Fit Basic or TDS controller on FUSE 1 or FUSE 2.
2. Fit Charging, Autofill, Hot Water or V2 Controllers on FUSE 3 or FUSE 4.
3. DO NOT EXCEED 40A in total

VEHICLE EARTH (CHASSIS/BODYWORK)

VEHICLE EARTH (CHASSIS/BODYWORK)

Spring (Europe) Limited
 Units 9 & 14, April Court
 Sybron Way
 Crowborough
 East Sussex
 TN6 3DZ

DC Distribution Box
 DRG: P.Napper
 Date: 07.08.14 Rev: 1.0