

## Set Up - Tank Filling

To start filling the tank simply press and hold the up and down buttons briefly. This will activate the solenoid valve, allowing water to fill the tank, until the float switch detects that the tank is full.



The tank can be filled when the unit is on and pumping or off. While the solenoid valve is on and the tank is filling, the display will flash the message FIL.



To manually stop the tank filling, press and briefly hold the up and down buttons again. The display will stop showing the FIL message.



The solenoid valve will be turned off if the unit detects a dead battery situation (below 11V).

## Additional Wiring

Wire the solenoid valve and float switch following this diagram.

