

Set Up - Tank Filling on Demand

The system starts filling automatically as long as the tank is not full. Filling will activate the solenoid valve, allowing water to fill the tank, until the float switch detects that the tank is full.

The tank can only be filled when the unit is on. (In standard controllers filling is possible whether the pump is running or not). While the solenoid valve is on and the tank is filling, the display will flash the message FIL.



It is not possible to manually stop the tank filling. Hence Autofill on Demand is effectively a tank level control, that keeps the tank topped up to the level of the float switch

The solenoid valve will be turned off if the unit detects a dead battery situation (below 10.5V).

Additional Wiring

Wire the solenoid valve and float switch following this diagram.

