

Flowmeter

Connect the pump controller in accordance with this diagram.  
NOTE: only fit the fuse once all connections are made.



The Fuse for this unit is a 10A Fuse. Make sure correct fuse is fitted inline, close to the battery end of the RED (positive) wire. Failure to do so will result in damage to the unit.

The flowrate in litres per minute can be displayed by pressing enter, rTE is displayed followed by the value.



Press enter again to display the water made (since purchase or last reset), Ltr is displayed followed by the value. This can be reset by pressing and holding the down button.




Press enter again to display the total water made in the controllers life, tOt is displayed followed by the value.



#### DISCLAIMER

THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY PRODUCT HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN.

For more information and videos on how to use Spring controllers please visit: [www.springltd.co/videos](http://www.springltd.co/videos)

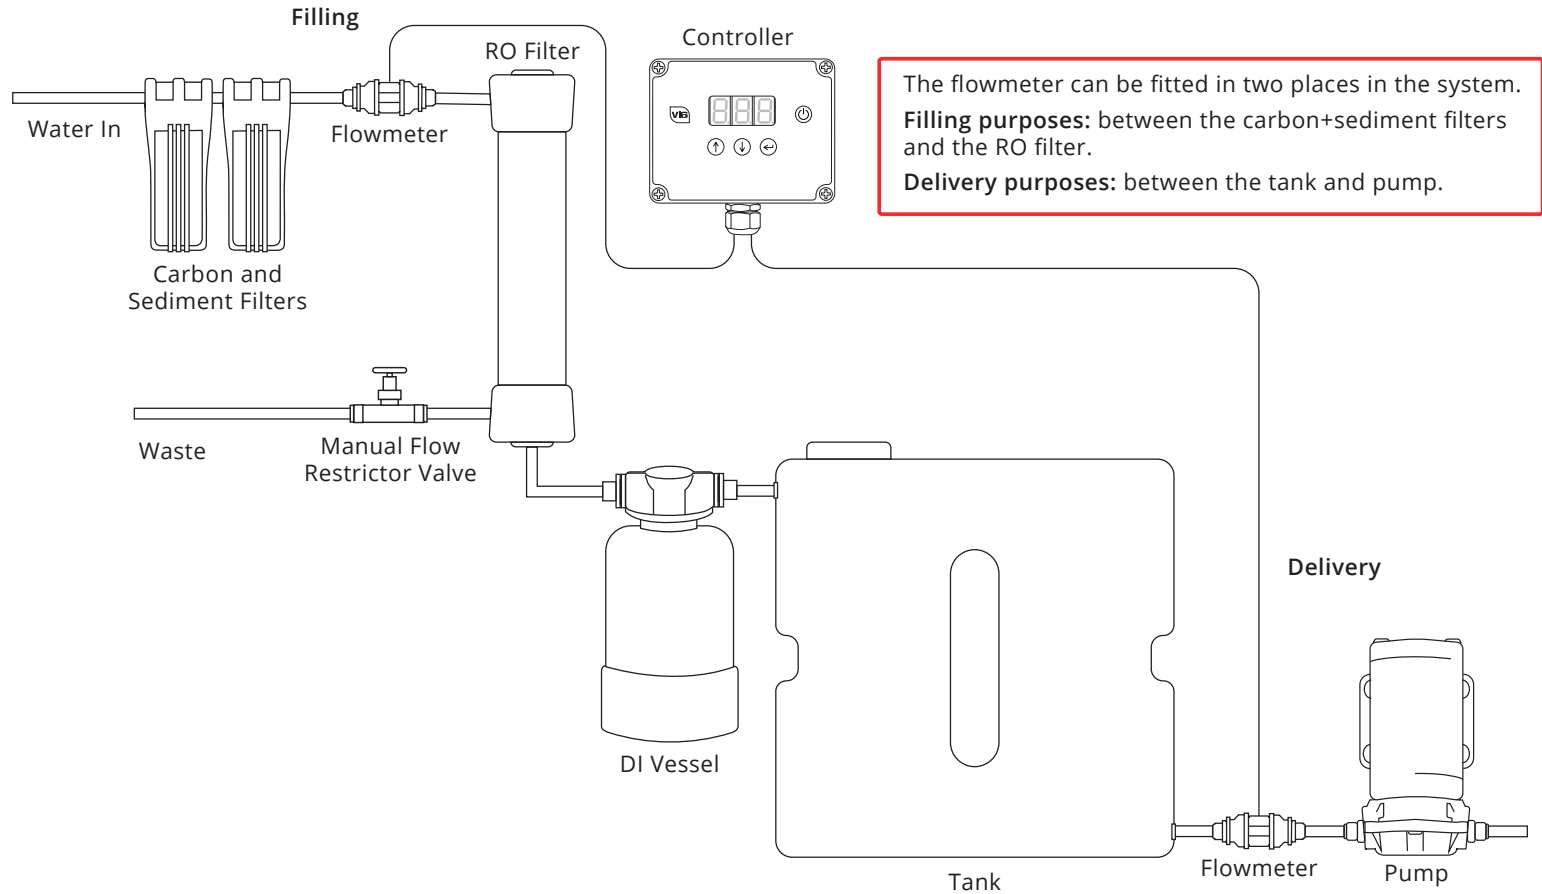

The flowmeter can be fitted in two places in the system.  
**Filling purposes:** between the carbon+sediment filters and the RO filter.  
**Delivery purposes:** between the tank and pump.

**DISCLAIMER!**

Unit must be installed by a competent electrician or electrical engineer.  
 Failure to comply with these instructions could invalidate your warranty.