




Flowmeter Additional Wiring

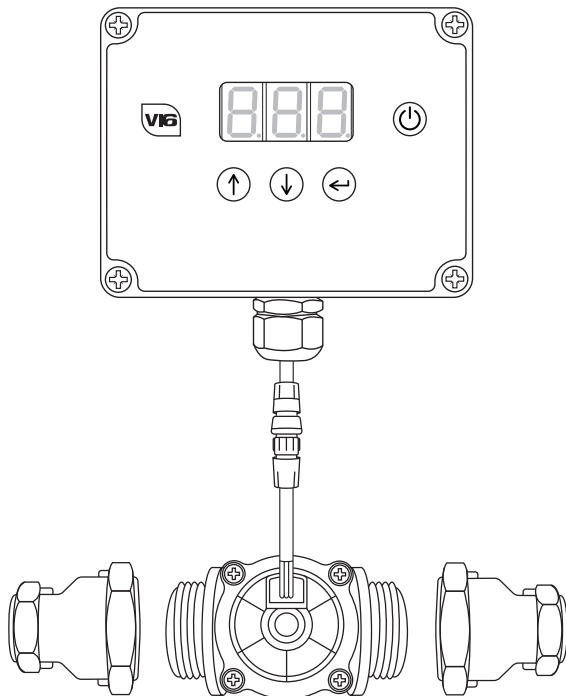

Flowmeter

Connect the pump controller in accordance with this diagram.
NOTE: only fit the fuse once all connections are made.



The Fuse for this unit is a 30A Fuse. Make sure correct fuse is fitted inline, close to the battery end of the RED (positive) wire. Failure to do so will result in damage to the unit.

The flowrate in litres per minute can be displayed by pressing enter, rTE is displayed followed by the value.



Press enter again to display the water made (since purchase or last reset), Ltr is displayed followed by the value. This can be reset by pressing and holding the down button.



Press enter again to display the total water made in the controllers life, tOt is displayed followed by the value.



Please consider the environment at the end of this product's life.

At end of life please take this unit to your closest electrical recycling point or return this unit to Spring (Europe) Limited for recycling.

Recycle Responsibly

ISO14001


DISCLAIMER

THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY PRODUCT HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN.

For more information and videos on how to use Spring controllers please visit: www.springltd.co/videos
Copyright © 2025 Spring (Europe) Ltd. All rights reserved.

European Patent: 3835575
VERSION 2.0 RELEASE 05.09.25

ECO Reference	Date
ECO0371	05.09.25

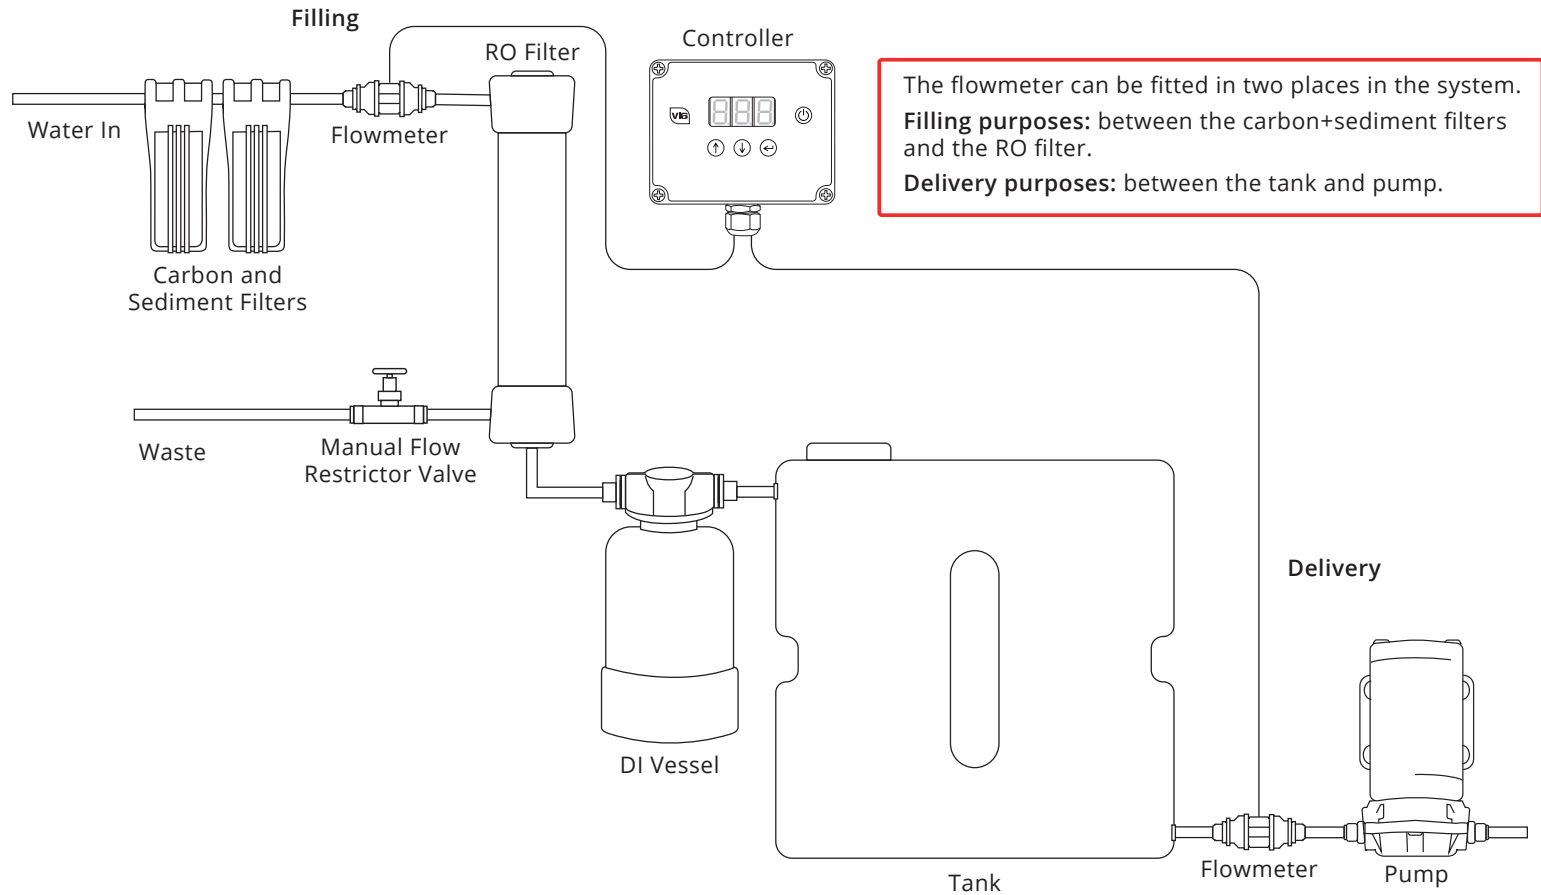**DISCLAIMER!**

Unit must be installed by a competent electrician or electrical engineer.
Failure to comply with these instructions could invalidate your warranty.