



Connect the pump controller in accordance with this diagram.

NOTE: only fit the fuse once all connections are made.

The fan will operate automatically when the controller detects a low temperature, circulating the warm air from the heater.

DISCLAIMER

THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY PRODUCT HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN.

For more information and videos on how to use Spring controllers please visit: www.springltd.co/videos

Copyright © 2025 Spring (Europe) Ltd. All rights reserved.

European Patent: 3835575



Please consider the environment at the end of this product's life.
At end of life please take this unit to your closest electrical recycling point or return this unit to Spring (Europe) Limited for recycling.
Recycle Responsibly
ISO14001

VERSION 1.1

RELEASE 08.09.25

ECO Reference	Date
ECO0371	08.09.25